

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the 12-volt battery is reconnected, or maintenance is performed on the vehicle:

Item	When to initialize	Reference
Engine oil maintenance data	After changing engine oil	P. 524
Tire pressure warning system	<ul style="list-style-type: none">• When rotating the tires on vehicles differing with front and rear tire inflation pressures• When changing the tire inflation pressure by changing traveling speed• When changing the tire size	P. 535

